



## Summary

[Request a quote](#)

---

[Catalog](#)

---

Number of contacts Low Voltage	37
Socket / Receptacle	Socket / Receptacle - Fixed Panel Front Mounted
Locking system	Push-pull
Size	0R
Suggested matching part	<a href="#">FGG.0R.337.ALC62</a>

[https://www.lemo.com/int\\_en/egg-0r-337-aln.html](https://www.lemo.com/int_en/egg-0r-337-aln.html)

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

# Technical details

## Electrical Configuration

Contact Termination Low voltage	PCB - Straight
Insert configuration value	0R.337 - 37 low voltage
Insulator	L: PEEK (UL 94 / V-0/1.5)
Rated current	0.5 A
Contact Type	Print (straight)
Contact Dia.	0.5
Number of contacts Low Voltage	37



## Form & Material

Shell style / Model id	EGG - Fixed receptacle, key (G) or key (A)
Socket / Receptacle	Fixed Panel Front Mounted
Housing material	Crastin® PBT (Polybutylene terephthalate), blue
Locking system	Push-pull
Keying	3 keys (alpha=50,beta=30, plug: male contacts, receptacle: female contacts)
Weight	5.19 g

## Environment

Environmental sealing (IP rating)	IP50
-----------------------------------	------

# Drawings

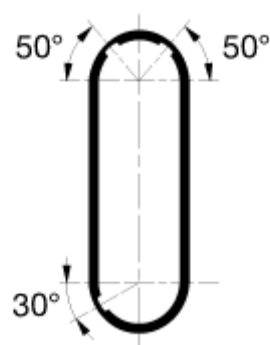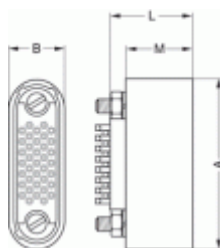

[https://www.lemo.com/int\\_en/egg-0r-337-aln.html](https://www.lemo.com/int_en/egg-0r-337-aln.html)

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

## Dimensions

	<b>A</b>	<b>B</b>	<b>L</b>	<b>M</b>
mm.	24.5	9	14	12
in.	0.96	0.35	0.55	0.47

[https://www.lemo.com/int\\_en/egg-0r-337-aln.html](https://www.lemo.com/int_en/egg-0r-337-aln.html)

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.